

Art. **N30353**

**CITROËN JUMPY  
PEUGEOT EXPERT  
TOYOTA PROACE**

04/16 →

**TOYOTA PROACE VERSO**

05/16 →

**CITROËN SPACE TOURER  
PEUGEOT TRAVELLER**

06/16 →



2925



3275




3275

L0 H1



L1 H1

L2 H1

**3** = Art. **N30353** x 1  
bars




**5** = Art. **N30353** x 1 + Art. **N30352** x 1  
bars

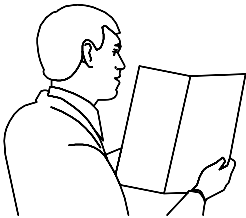


- (I) ISTRUZIONI DI MONTAGGIO
- (GB) FITTING INSTRUCTIONS
- (D) MONTAGEANLEITUNG
- (F) INSTRUCTIONS DE MONTAGE
- (E) INSTRUCCIONES DE MONTAJE
- (P) INSTRUÇÕES DE MONTAGEM
- (NL) MONTAGE-INSTRUCTIES
- (S) MONTERINGSANVISNING
- (FIN) ASENNUSOHJE
- (EST) PAIGALDUSJUHEND
- (AT) STIPRINÁŠANAS INSTRUKCIJA
- (LT) PRITVIRTINIMO INSTRUKCIJOS
- (PL) INSTRUKCJA MONTAŻU
- (RUS) Инструкции по установке
- (CZ) NÁVOD NA MONTÁŽ
- (SK) NÁVOD NA MONTÁŽ
- (SLO) NAVODILA ZA PRITRJEVANJE
- (HR) UPUTA ZA SASTAVLJANJE
- (H) A FELSZERELÉS MÓDJA
- (GR) Οδηγίες συναρμολόγησης
- (TR) MONTAJ TALIMATLARLARI
- (BG) ИНСТРУКЦИИ ЗА МОНТАЖ
- (SRB) UPUTSTVA ZA MONTAŽU

**KIT x6**

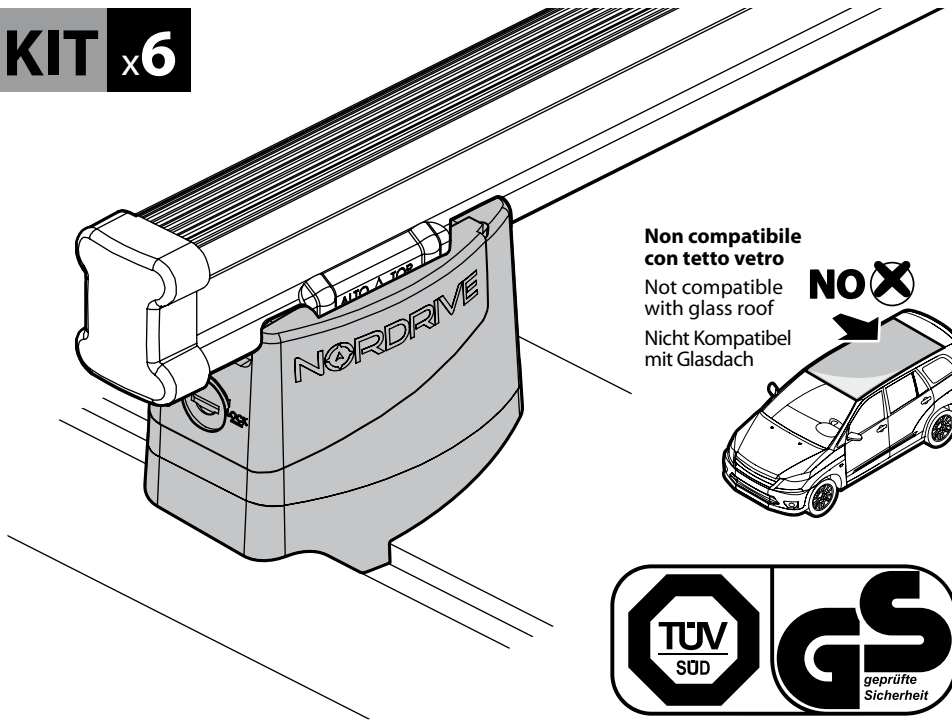


**Non compatibile  
con tetto vetro**  
Not compatible  
with glass roof  
Nicht Kompatibel  
mit Glasdach

**NO**

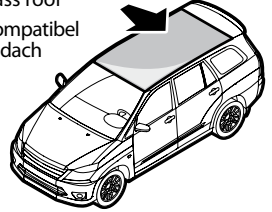

- (I) ADATTO PER
- (GB) SUITABLE FOR
- (F) INDIQUÉ POUR
- (D) GEEIGNET FÜR
- (E) ADECUADA PARA


**NORDRIVE  
KARGO SERIES**

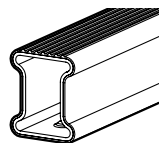


**Kargo**  
ACCIAIO  
Steel

- (I) BARRE KARGO
- (GB) KARGO BARS
- (F) BARRES KARGO
- (D) DACH-LASTENTRÄGER KARGO
- (E) BARRES KARGO

150cm

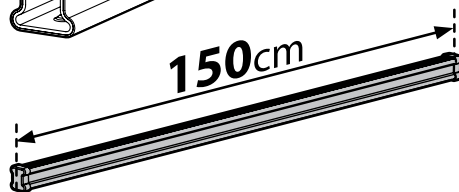


Art. **N10010** x3

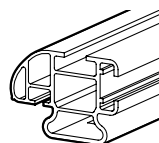


**Kargo-Plus**  
ALLUMINIO  
Aluminium

- (I) BARRE KARGO-PLUS
- (GB) KARGO-PLUS BARS
- (F) BARRES KARGO-PLUS
- (D) DACH-LASTENTRÄGER KARGO-PLUS
- (E) BARRES KARGO-PLUS

150cm

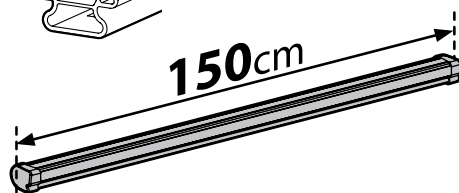


Art. **N10040** x3

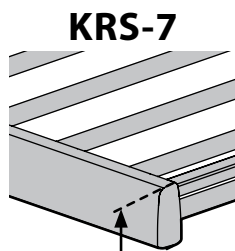

**KRS-7**

7cm

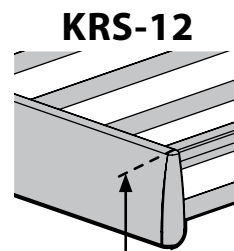


**KRS-12**

12cm

- (I) CESTE PORTATUTTO KRS-7 / KRS-12
- (GB) KRS-7 / KRS-12 VAN ROOF RACKS
- (F) GALERIE KRS-7 / KRS-12
- (D) DACHKÖRBEIN KRS-7 / KRS-12
- (E) BACAS KRS-7 / KRS-12

**NORDRIVE®**










TRANSPORT SOLUTIONS












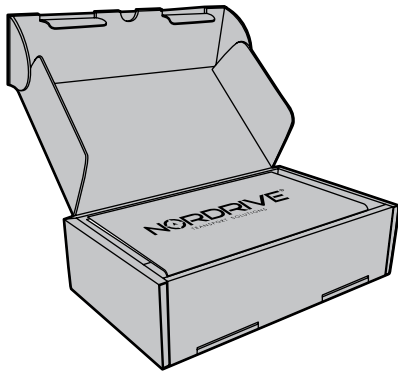





# NORDRIVE<sup>®</sup>

TRANSPORT SOLUTIONS

Art. **N30353**

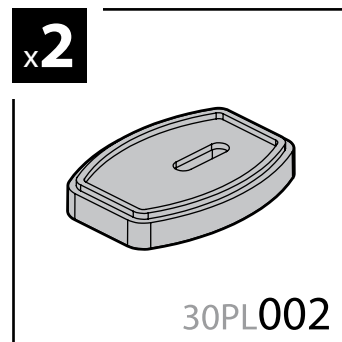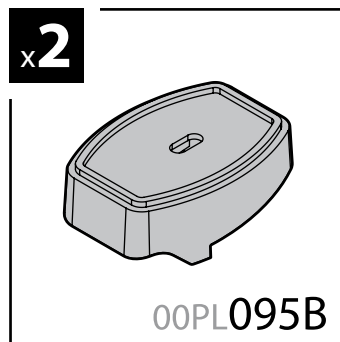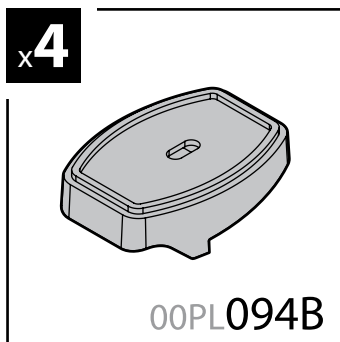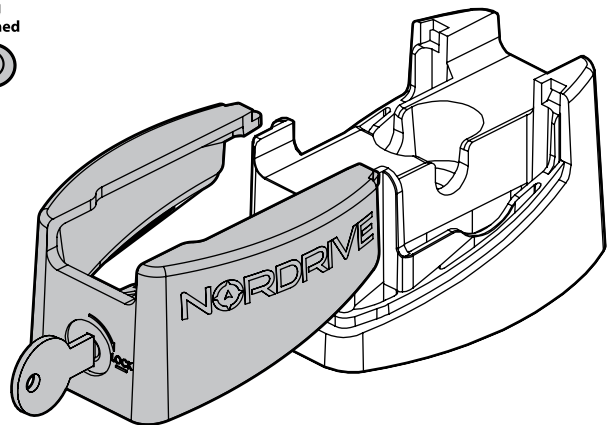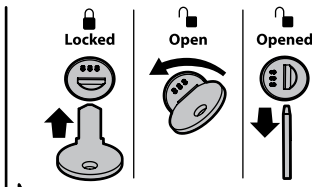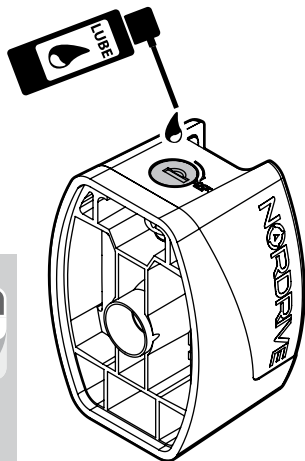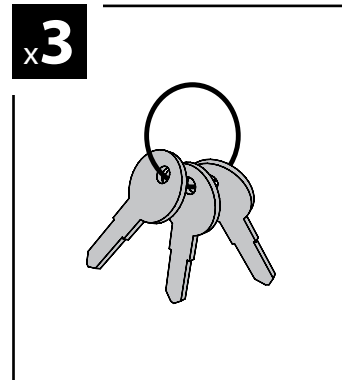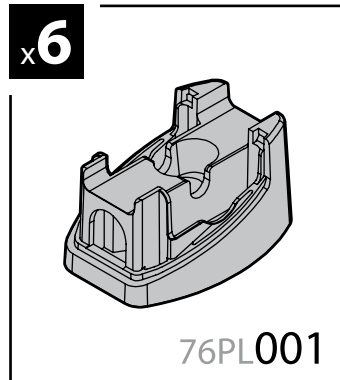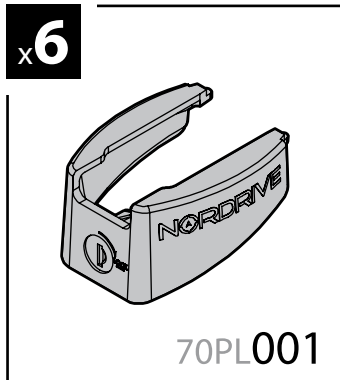

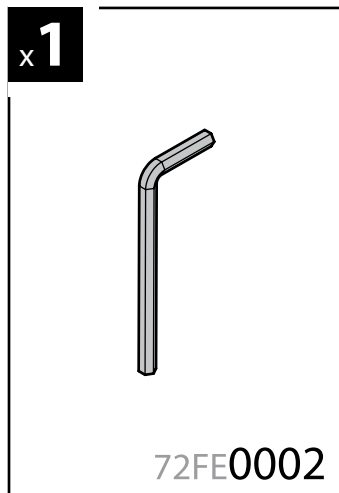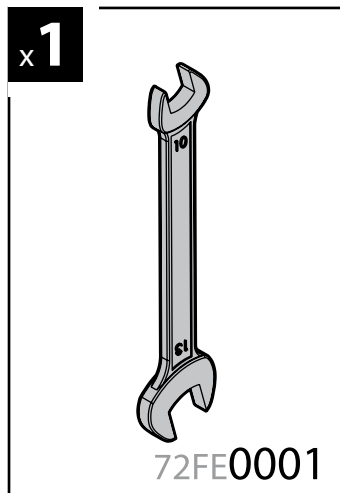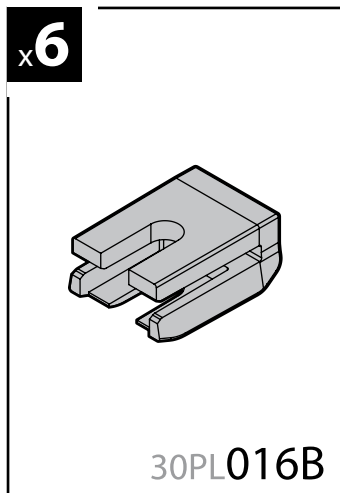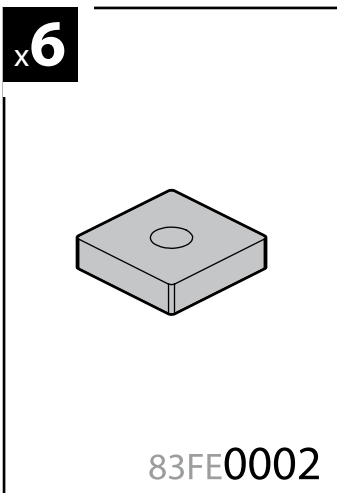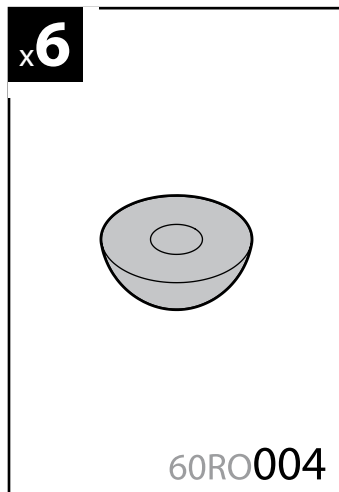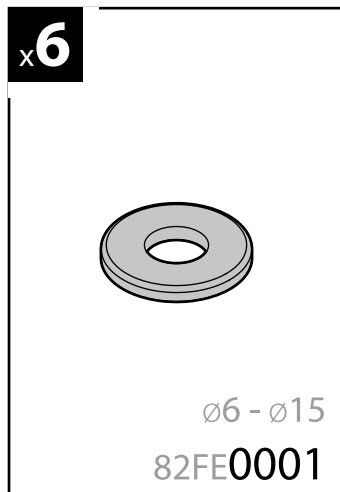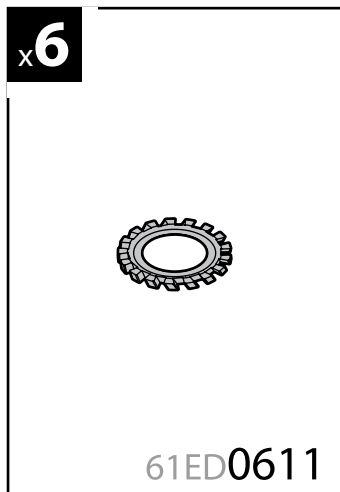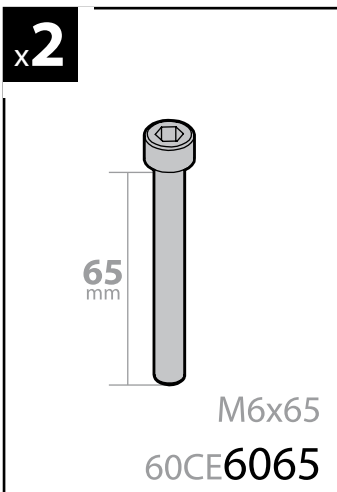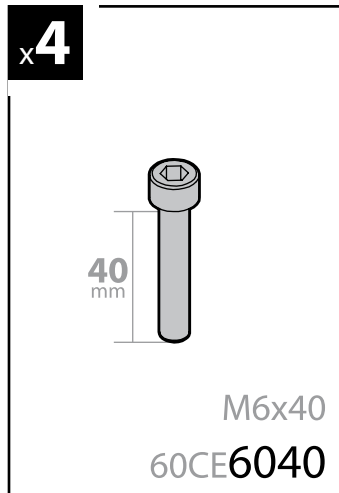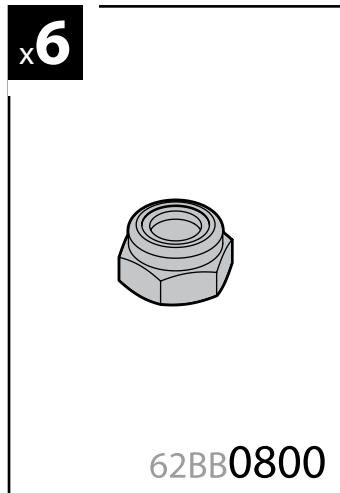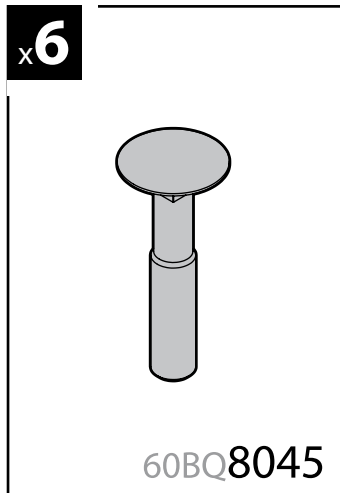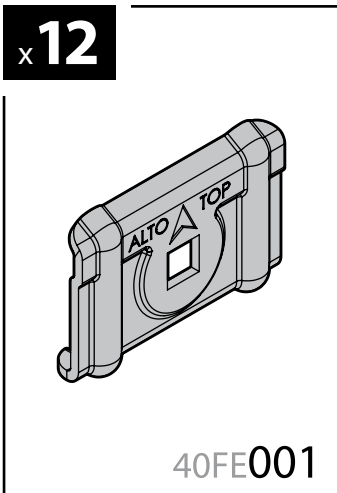


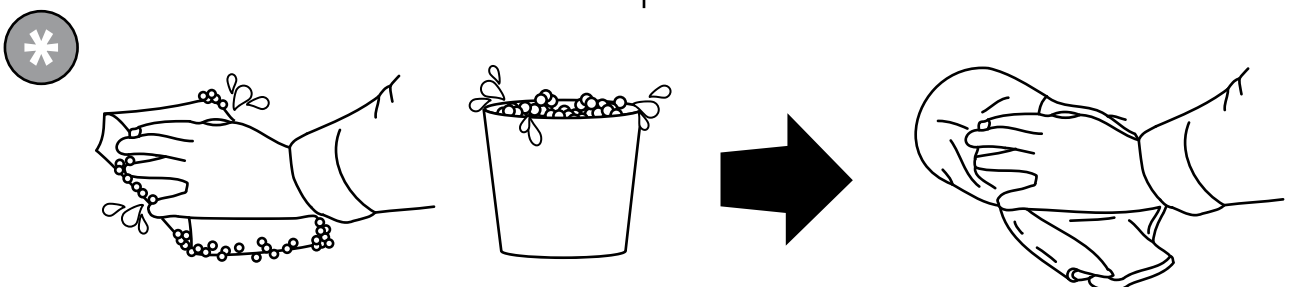
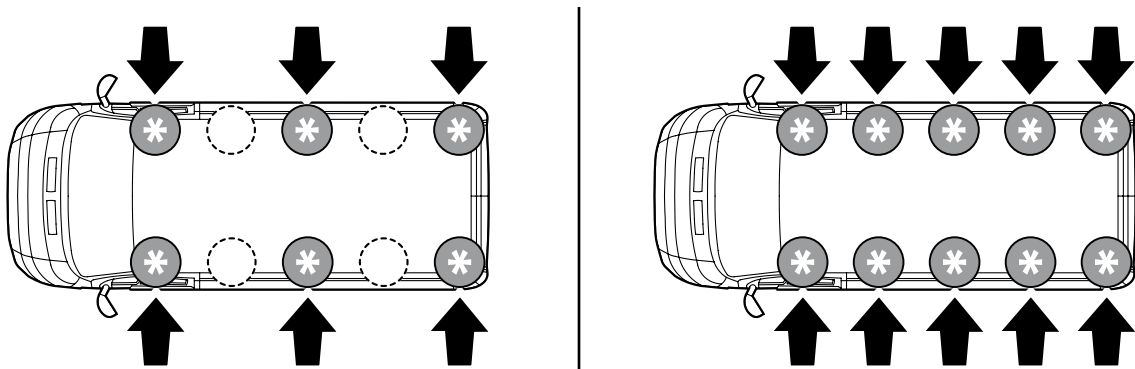
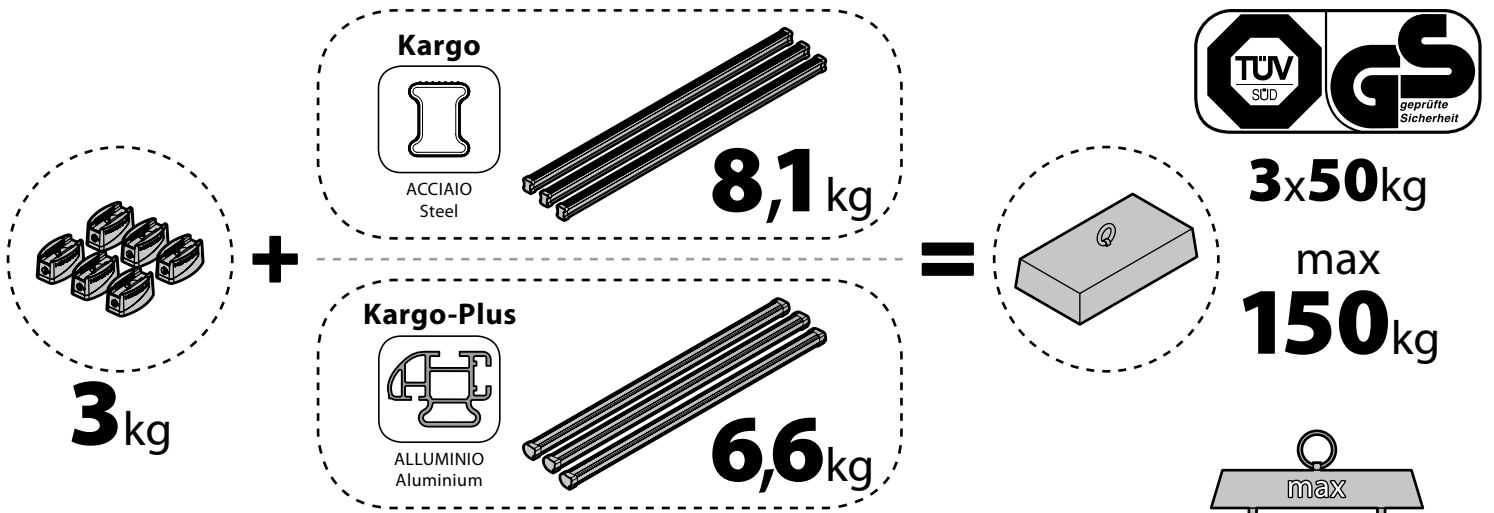


- ⓘ ISTRUZIONI DI MONTAGGIO
- Ⓖᅁ FITTING INSTRUCTIONS
- Ⓓ MONTAGEANLEITUNG
- Ⓕ INSTRUCTIONS DE MONTAGE
- Ⓔ ISTRUCCIONES DE MONTAJE
- ⒫ INSTRUÇÕES DE MONTAGEM
- Ⓖᅀ MONTAGE-INSTRUCTIES
- Ⓔ MONTERINGSANVISNING

- Ⓕᅀ ASENNUSOHJE
- Ⓔᅀ PAIGALDUSJUHEND
- Ⓕᅀ STIPRIŅĀŠANAS INSTRUKCIJA
- Ⓕᅀ PRITVIRTINIMO INSTRUKCIJOS
- Ⓕᅀ INSTRUKCJA MONTAŻU
- Ⓕᅀ Инструкции по установке
- Ⓕᅀ NÁVOD NA MONTÁŽ
- Ⓕᅀ NÁVOD NA MONTÁŽ


- Ⓕᅀ NAVODILA ZA PRITRJEVANJE
- Ⓕᅀ UPUTA ZA SASTAVLJANJE
- Ⓕᅀ A FELSZERELÉS MÓDJA
- Ⓕᅀ Οδηγίες συναρμολόγησης
- Ⓕᅀ MONTAJ TALIMATLARL
- Ⓕᅀ ИНСТРУКЦИИ ЗА МОНТАЖ
- Ⓕᅀ UPUTSTVA ZA MONTAŽU

**1**

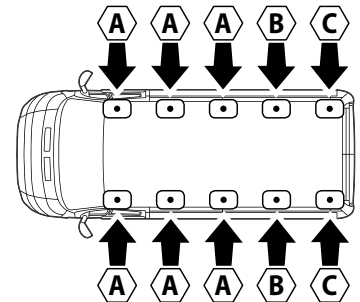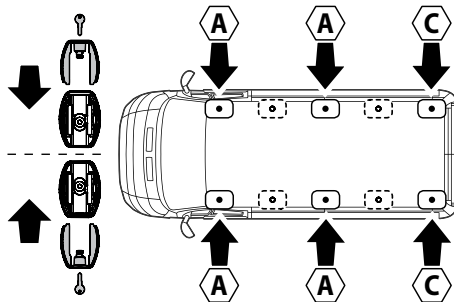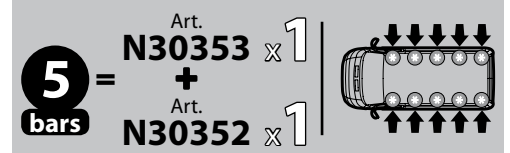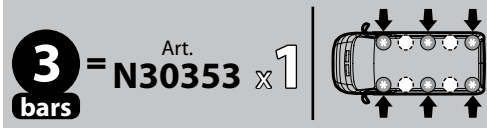


**2**

**A**

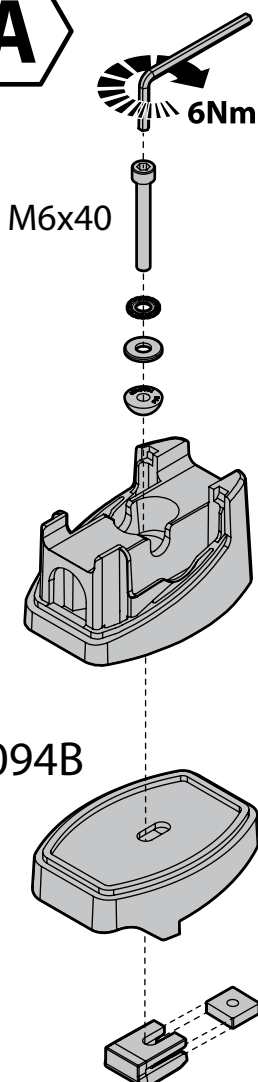


**2**

**B**


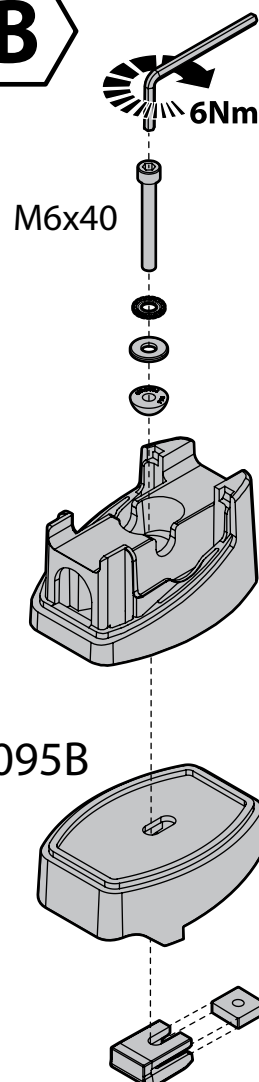


**2**




**C**

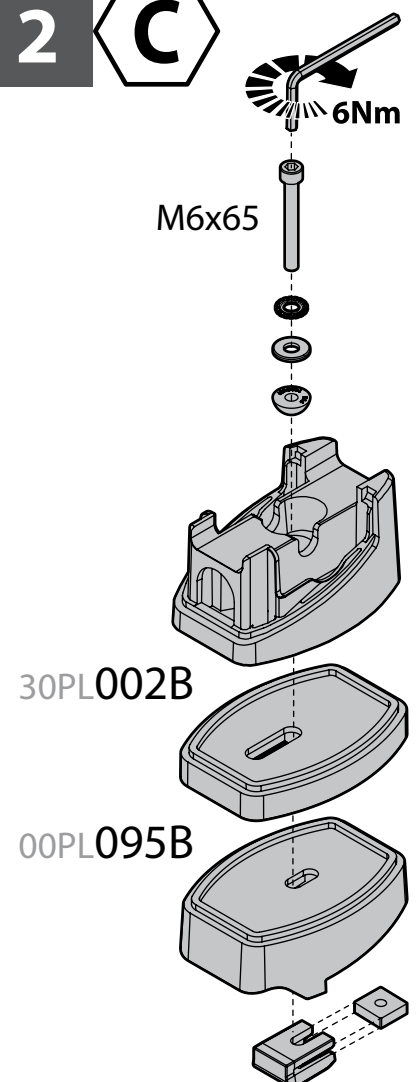

3

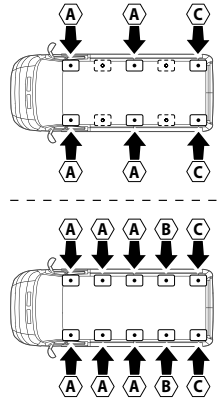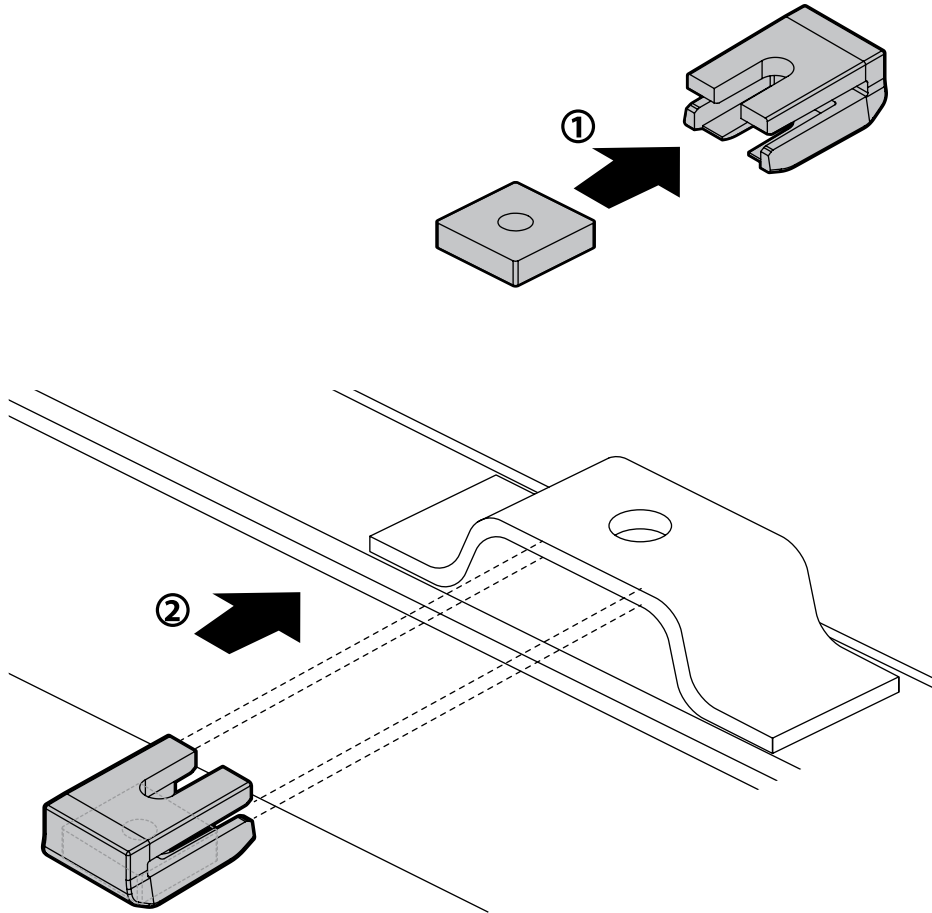

4

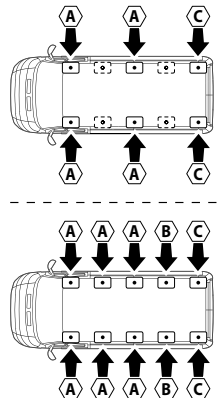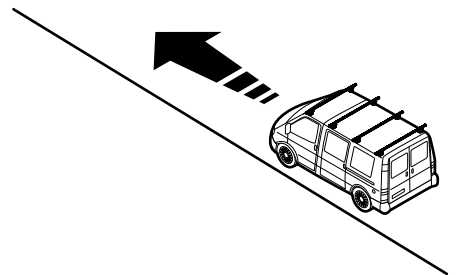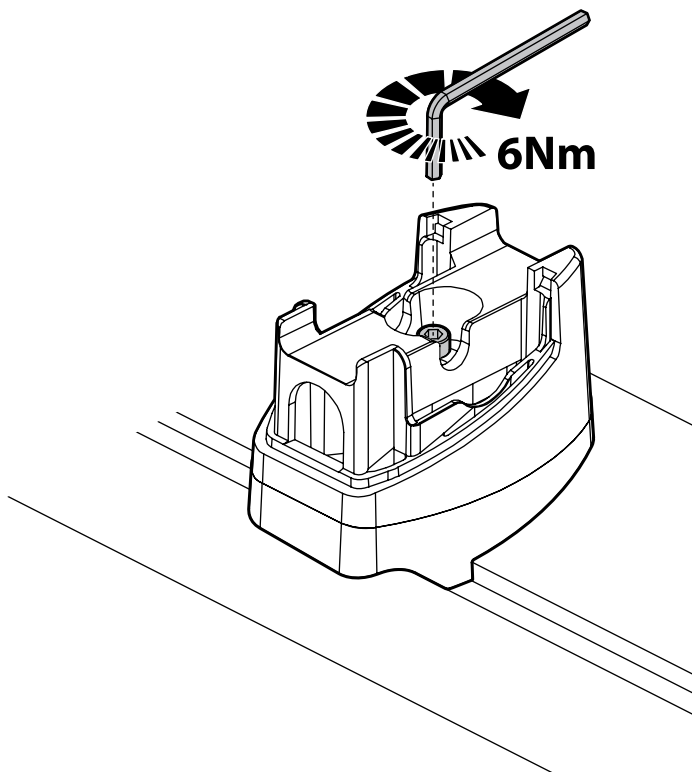



# ATTENZIONE WARNING




## A

### Kargo



ACCIAIO  
Steel

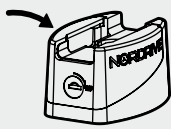


MONTAGGIO DIRETTO  
SUI KIT PIEDI SPECIFICI  
DIRECTLY ON FOOT KITS  
BEFESTIGUNGSFÜSSE

## B

### Kargo-Plus






ALLUMINIO  
Aluminium









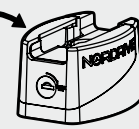


MONTAGGIO DIRETTO  
SUI KIT PIEDI SPECIFICI  
DIRECTLY ON FOOT KITS  
BEFESTIGUNGSFÜSSE

OK ✓

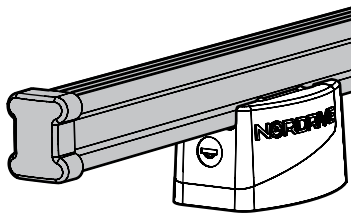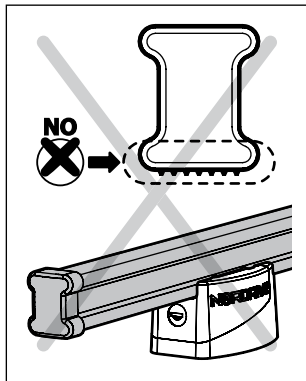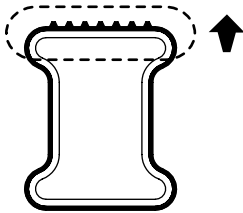


OK ✓

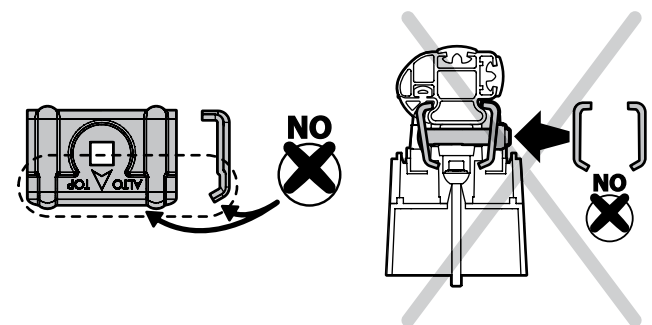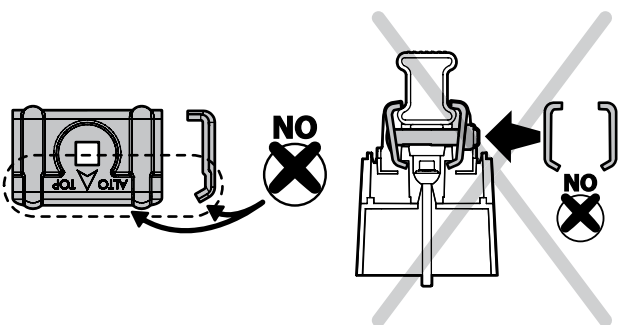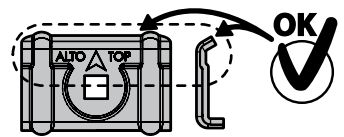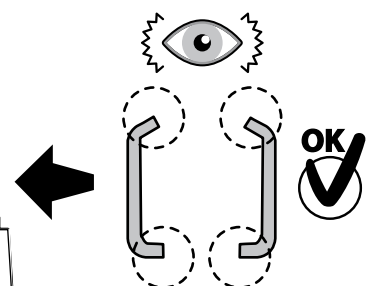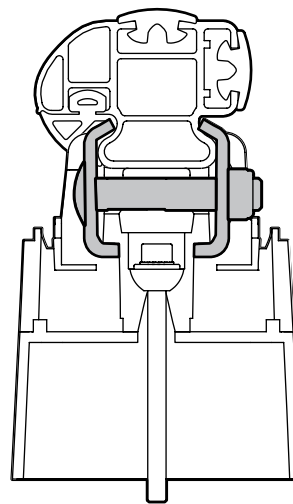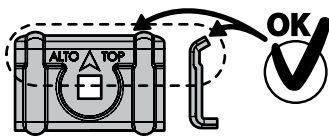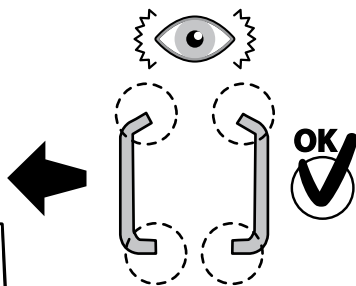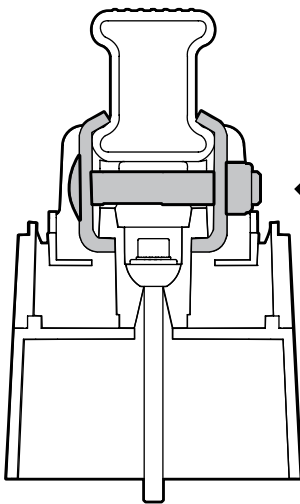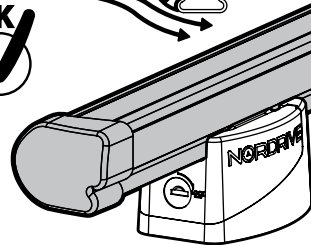

# 5

**A**

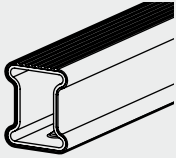

**Kargo**  
ACCIAIO  
Steel


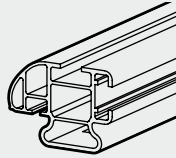


Diagram showing the Kargo steel bar being installed on a vehicle roof. The bar is positioned across the roof rails, and the diagram indicates the correct placement and alignment.

**B**



**Kargo-Plus**  
ALLUMINIO  
Aluminium




Diagram showing the Kargo-Plus aluminium bar being installed on a vehicle roof. Step 1 shows the bar being placed on the roof rails. Step 2 shows the bar being secured with clips, with scissors indicating where to cut the clips.

**6**

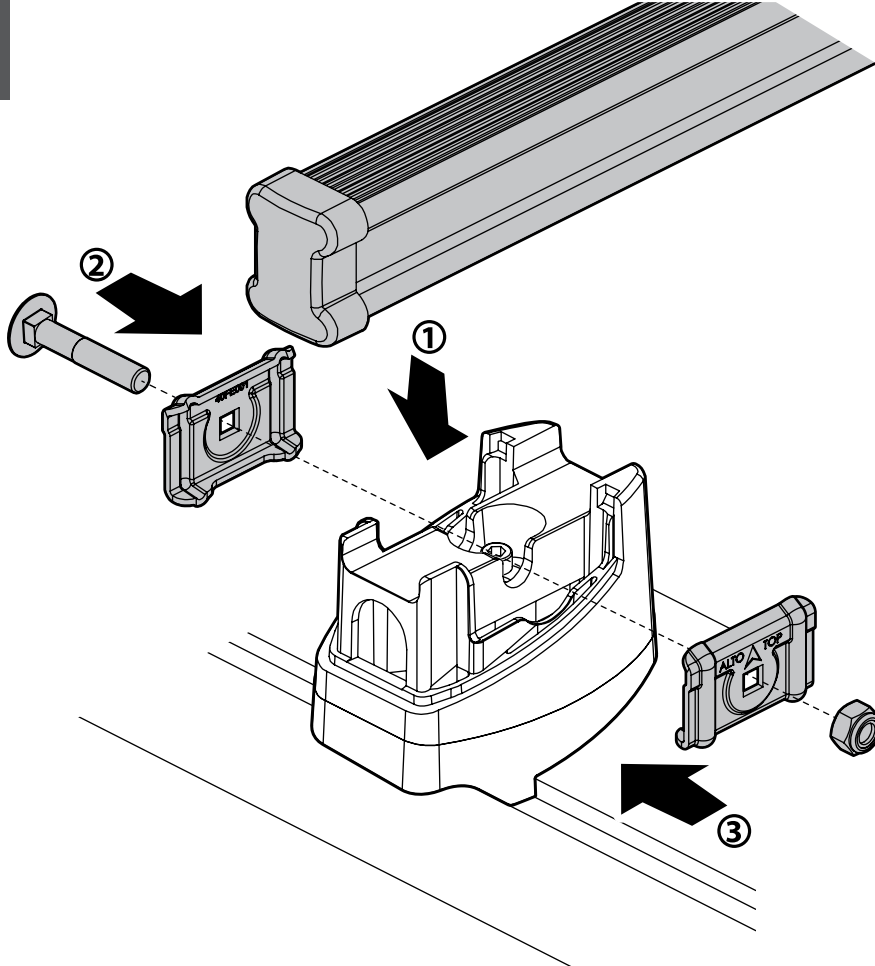


Diagram showing the detailed assembly of the Kargo bar. Step 1 shows the bar being inserted into the base. Step 2 shows a bolt being inserted into the bar. Step 3 shows the bar being secured with a nut. The diagram also shows the bar being installed on a vehicle roof.



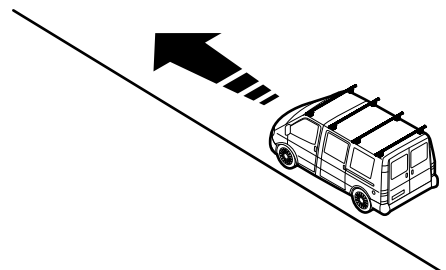





Diagram showing the bar configurations. The top configuration shows a bar with three mounting points labeled A, A, and C. The bottom configuration shows a bar with five mounting points labeled A, A, A, B, and C.

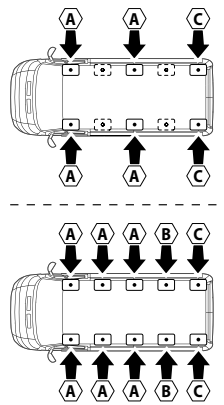

7

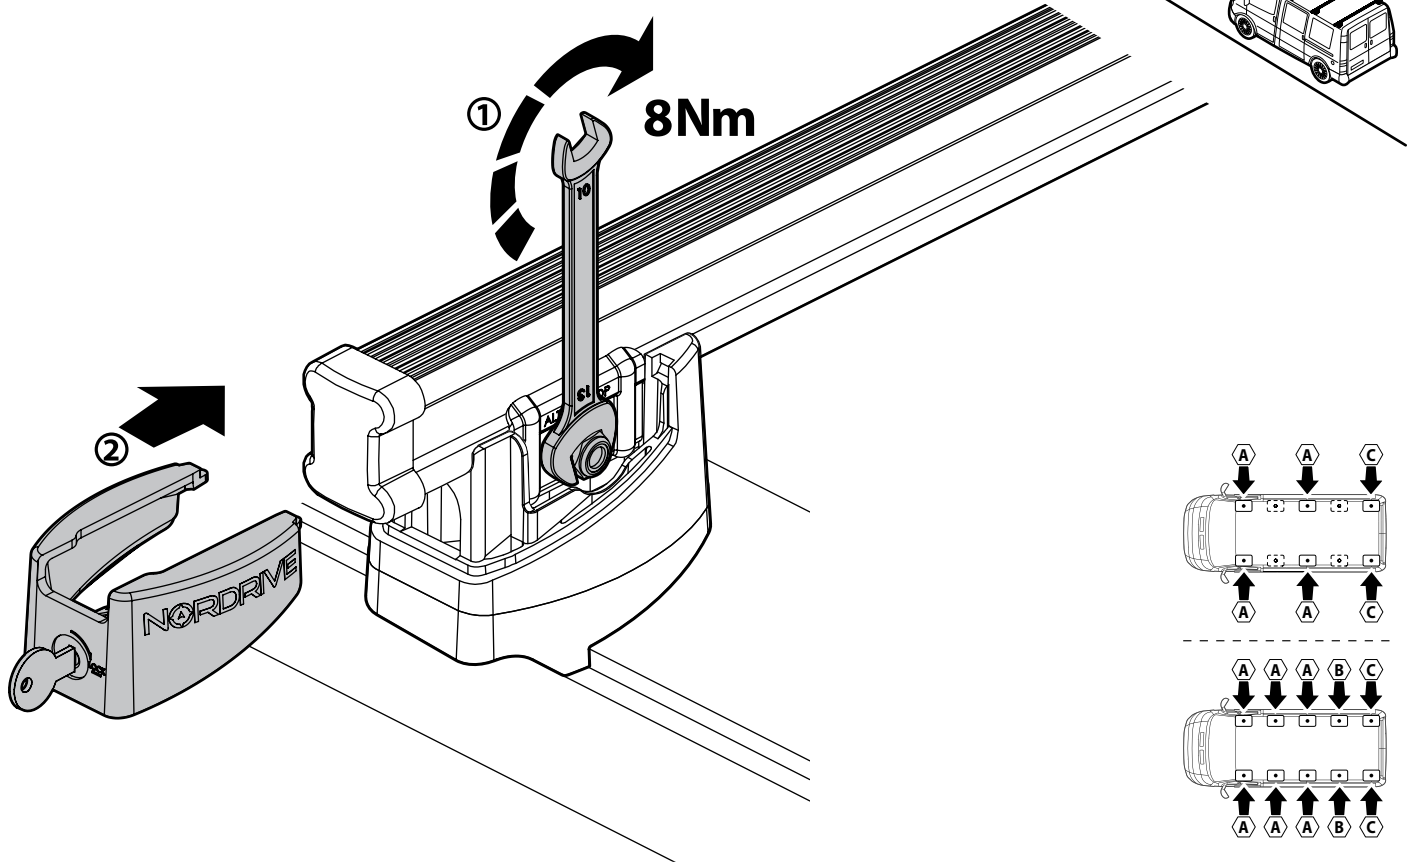


8

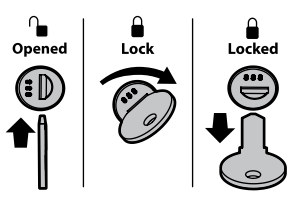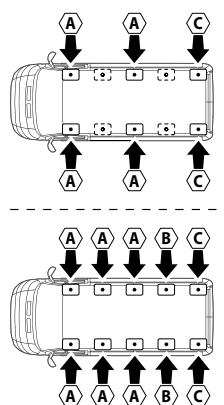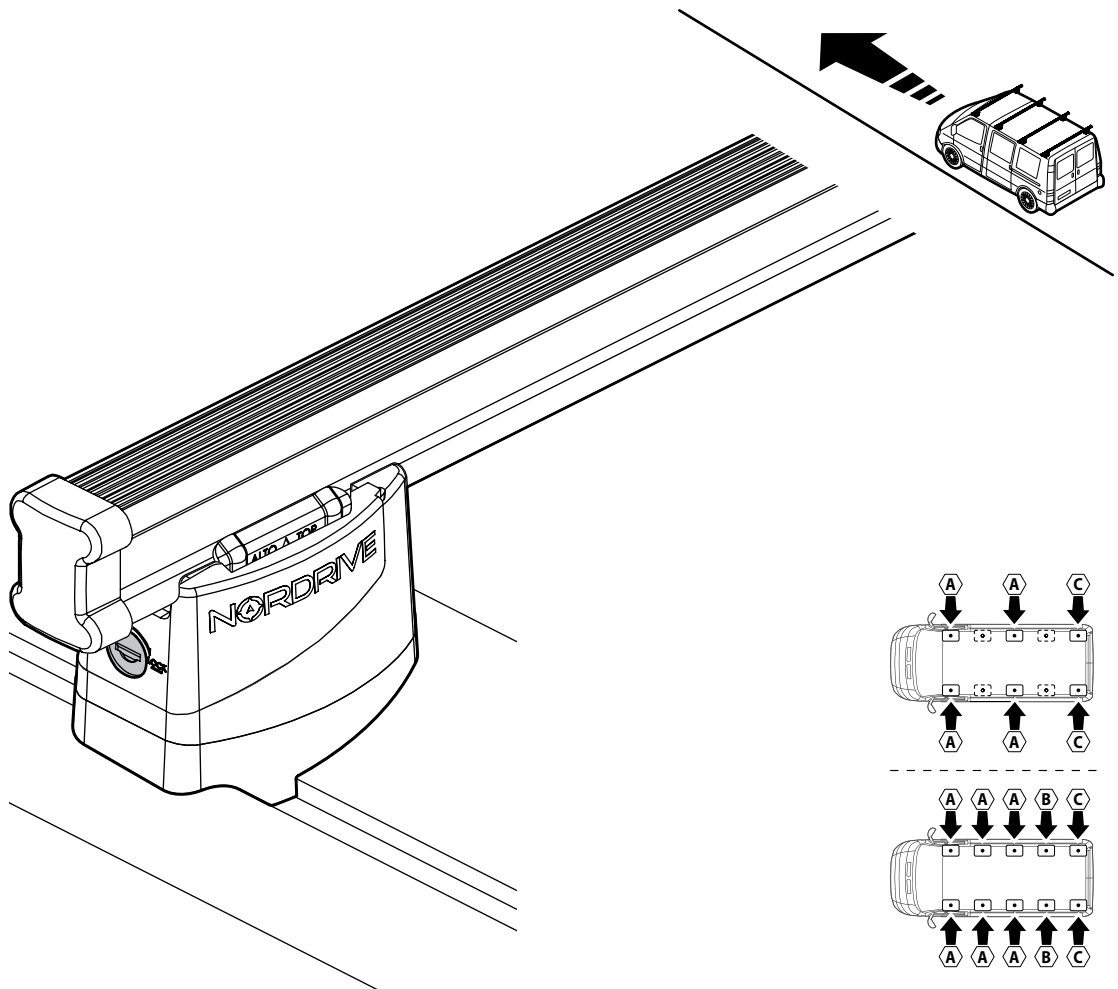

# Kargo series




Acciaio / Steel

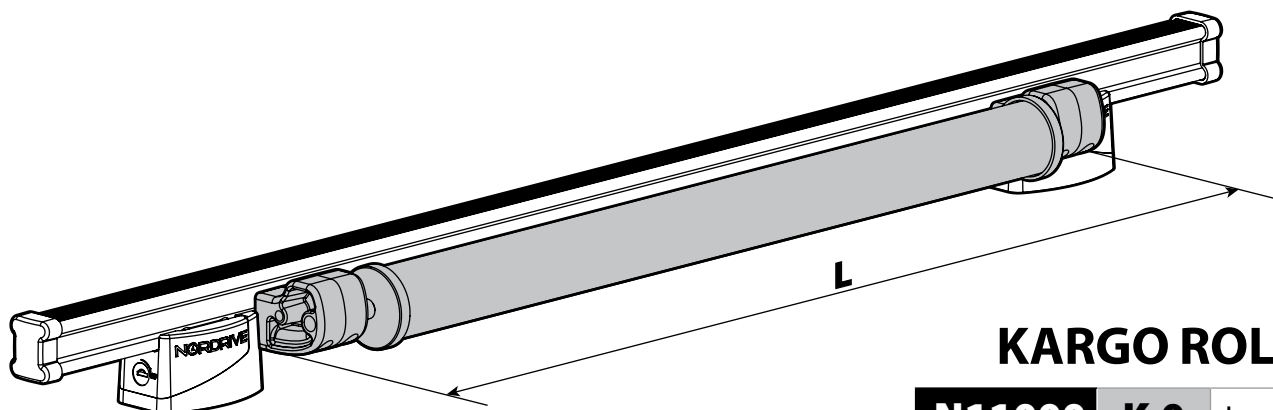


## KARGO ROLLER

<b>N11000</b>	<b>K-0</b>	L = 64 cm
<b>N11003</b>	<b>K-7</b>	L = 96 cm

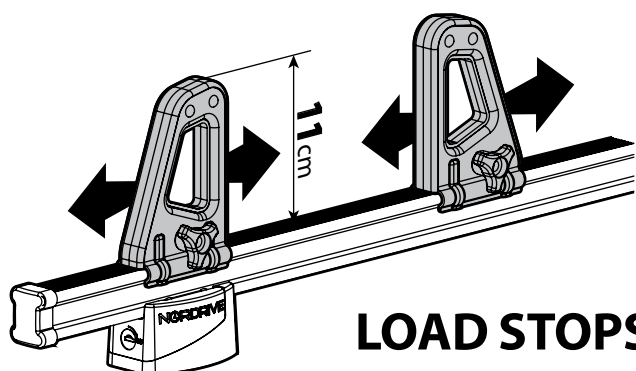


## LOAD STOPS

**N11001** K-1

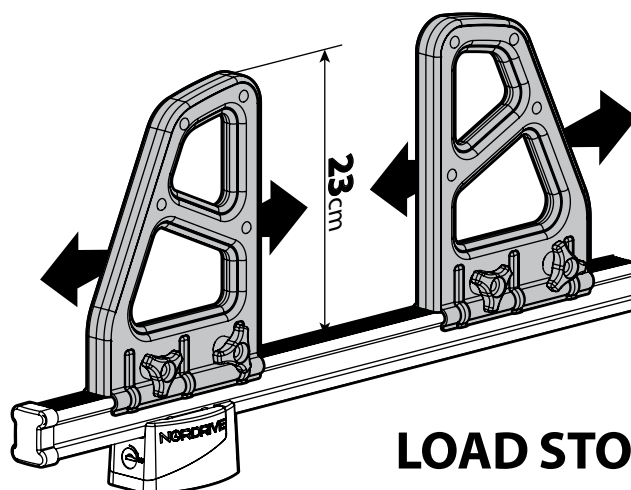

## LOAD STOPS

**N11002** K-2

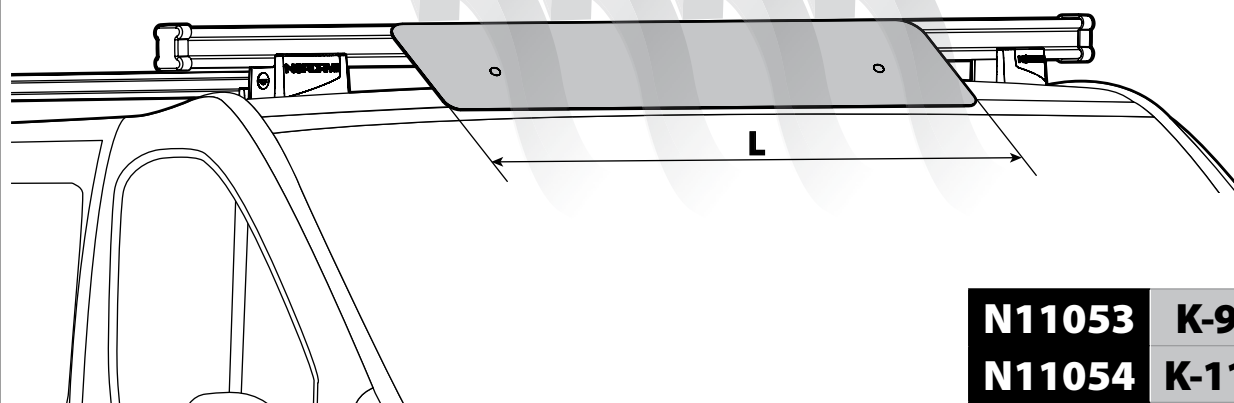


## SPOILER


<b>N11053</b>	<b>K-9</b>	L = 95 cm
<b>N11054</b>	<b>K-11</b>	L = 110 cm

**OPTIONALS** PER / FOR / FÜR:

# Kargo-Plus series

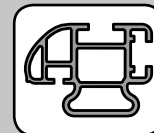


Alluminio / Aluminium

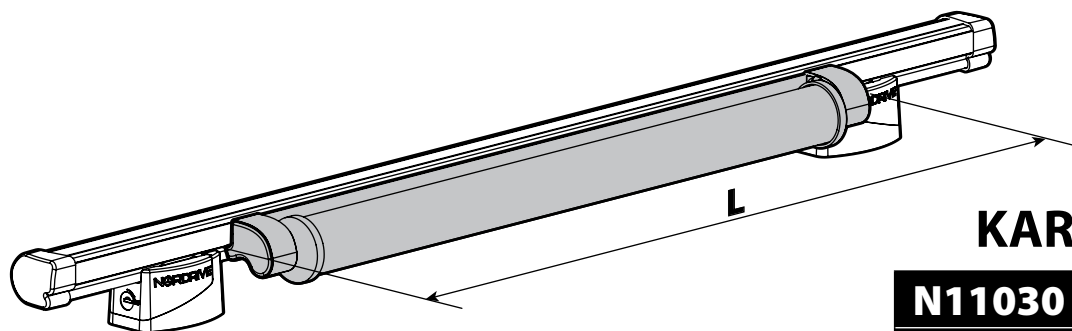

## KARGO ROLLER


**N11030** KP-0 L = 64 cm

**N11034** KP-7 L = 96 cm

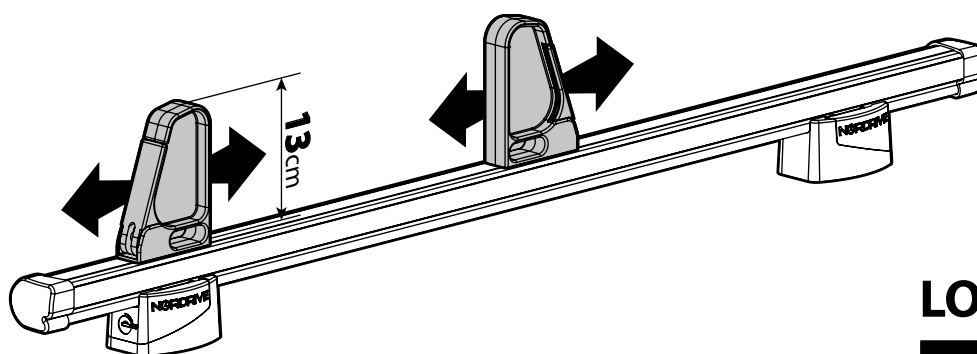


## LOAD STOPS

**N11031** KP-1

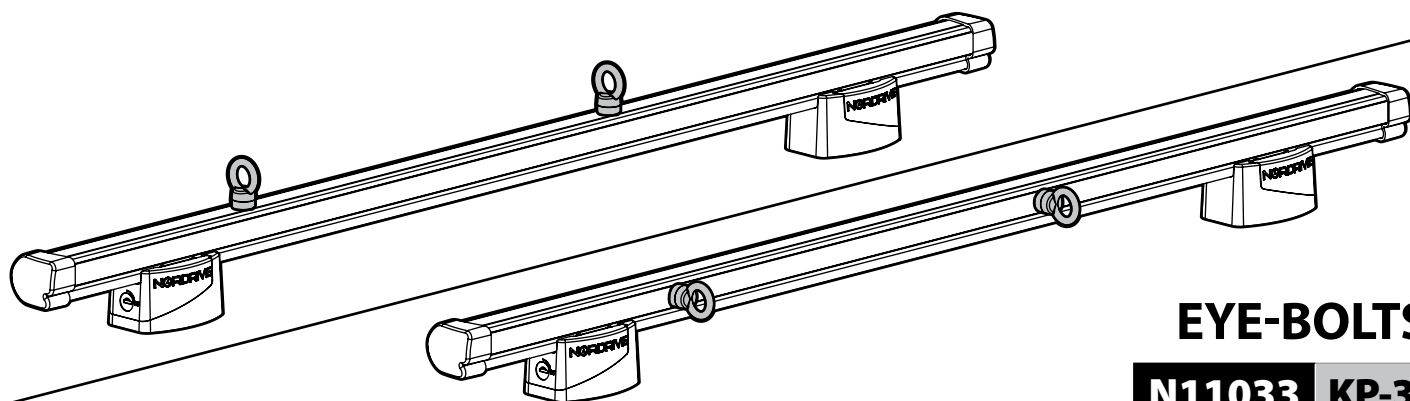

## EYE-BOLTS

**N11033** KP-3

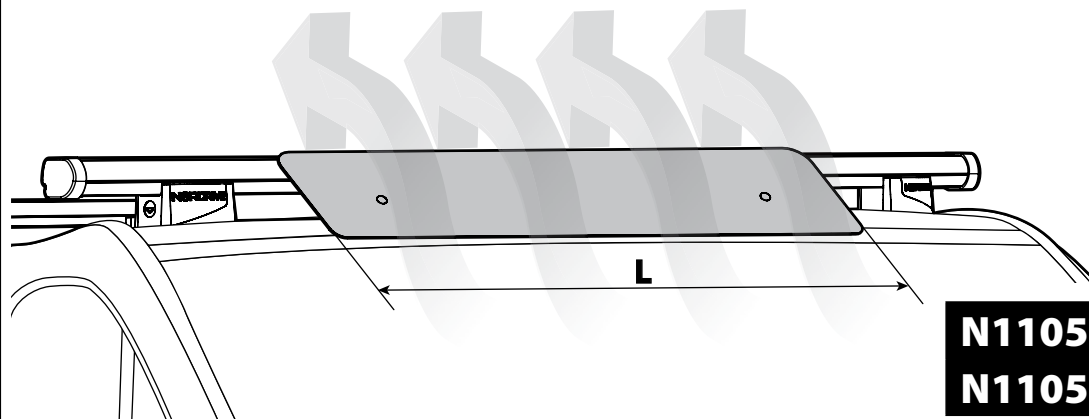

## SPOILER

**N11057** KP-9 L = 95 cm

**N11058** KP-11 L = 110 cm


OPTIONALS PER / FOR / FÜR:

# Kargo series



Acciaio / Steel


# Kargo-Plus series

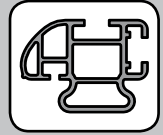

Alluminio / Aluminium



## KARGO-TUBE

<b>N11050</b>	<b>T200</b>	L = 205 cm
<b>N11051</b>	<b>T300</b>	L = 305 cm
<b>N11052</b>	<b>T400</b>	L = 405 cm

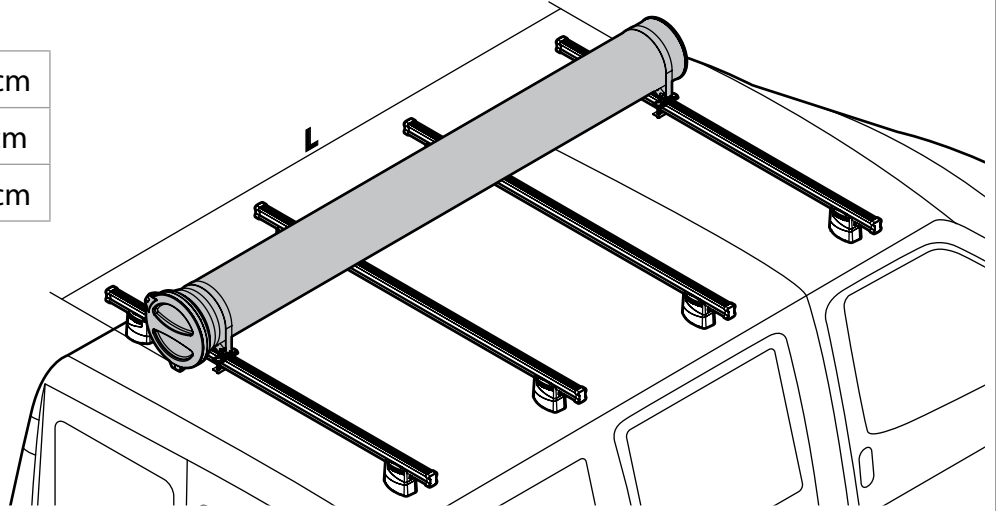


## LADDER HOLDER STRAPS

**N11065** U-5

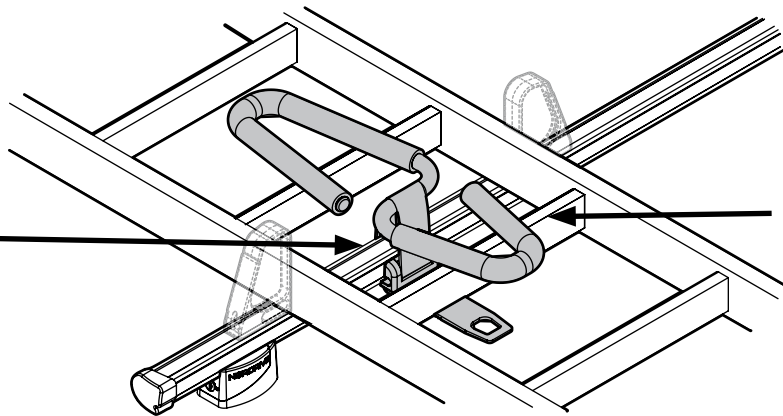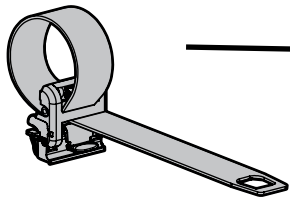

## LADDER STEP ADAPTER

**N11067** U-6

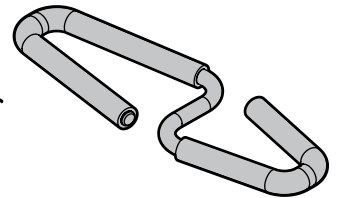

## EXTENSION ROLLER

<b>N11020</b>	<b>U-0</b>	L = 64 cm
<b>N11021</b>	<b>U-7</b>	L = 96 cm

